



Integration Guide for 19-inch Open Frame with Front Bezel or Enclosure

To Integrate 19" Open frame with the front bezel, perform the following:

Step 1. Place the rubber on the top of the panel or touch, customer needs to provide their own rubber gasket



- We recommend the rubber thickness ranges from 2.0-2.5mm. After pressing the rubber, it should be 2.0 mm thick and aligned with the surface of the frame.

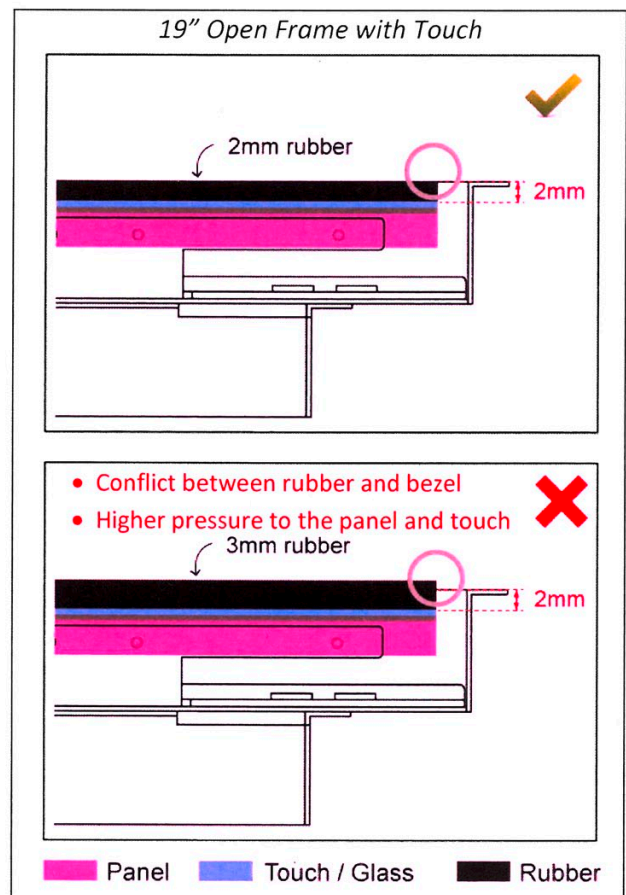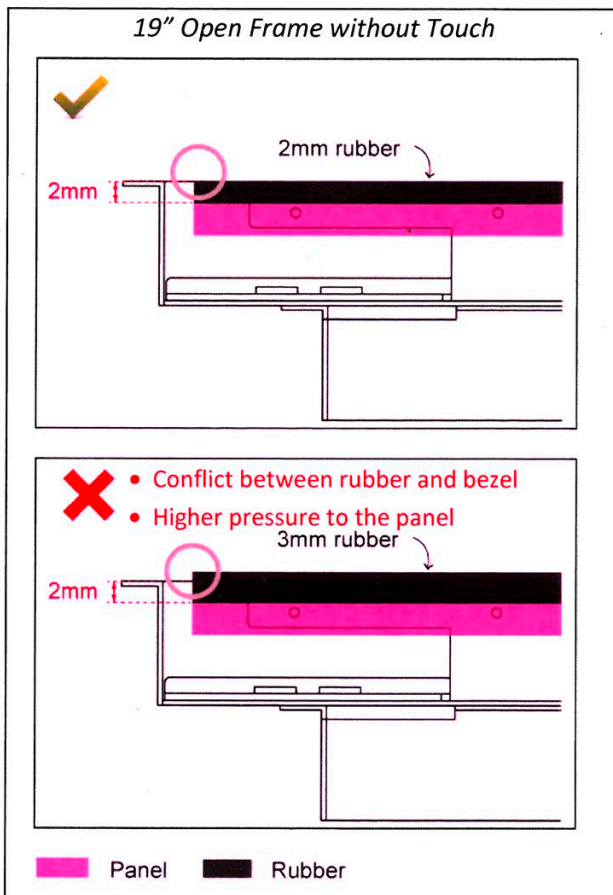

Step 2. Place the panel pc / display on the customer's fixture or front bezel



- Please Do not over-press the surface of device to avoid product damage during installation

Step 3. Fasten the device and customer front bezel with the M3 screw